

Curing Sunroof Rattles

To prevent rattle, the vent screen is fitted with 2 fibre strips as shown



They are woefully inadequate. The vent screen rattles against 2 points.

At the front of the sunroof opening against the 2 prongs.



And against this metal strip the vent screen slides under when open.




1) Get some self adhesive furniture feet pads like this.




They are commonly used to protect laminate & wood floors from being marked by the feet of furniture & cheap easy to pick up in most good DIY stores. They need to be no more than 4 mm thick.

2) Fully open the sunroof. Trim down a pad to fit on the lip of the vent screen at the front to slip under the front prongs as pictured

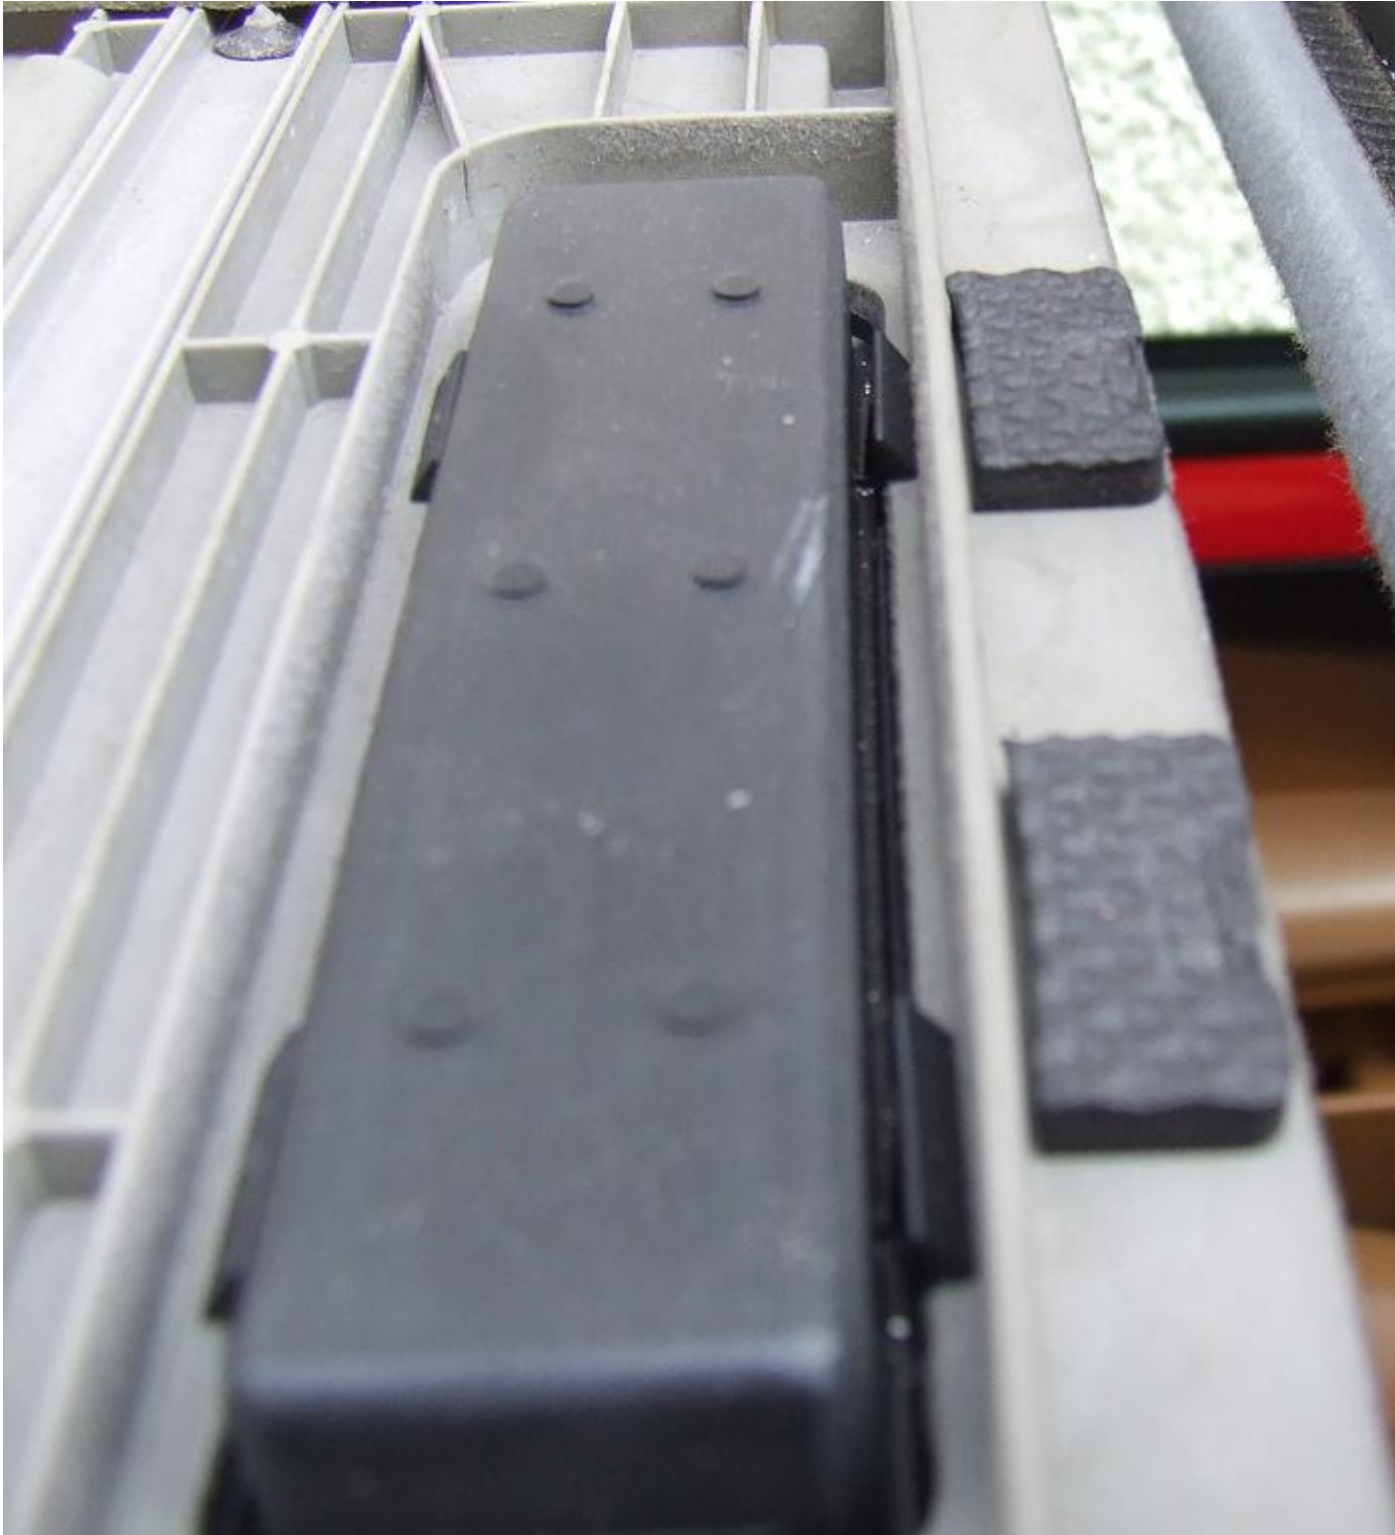

You should now be able to close the vent screen without it rattling against the 2 prongs

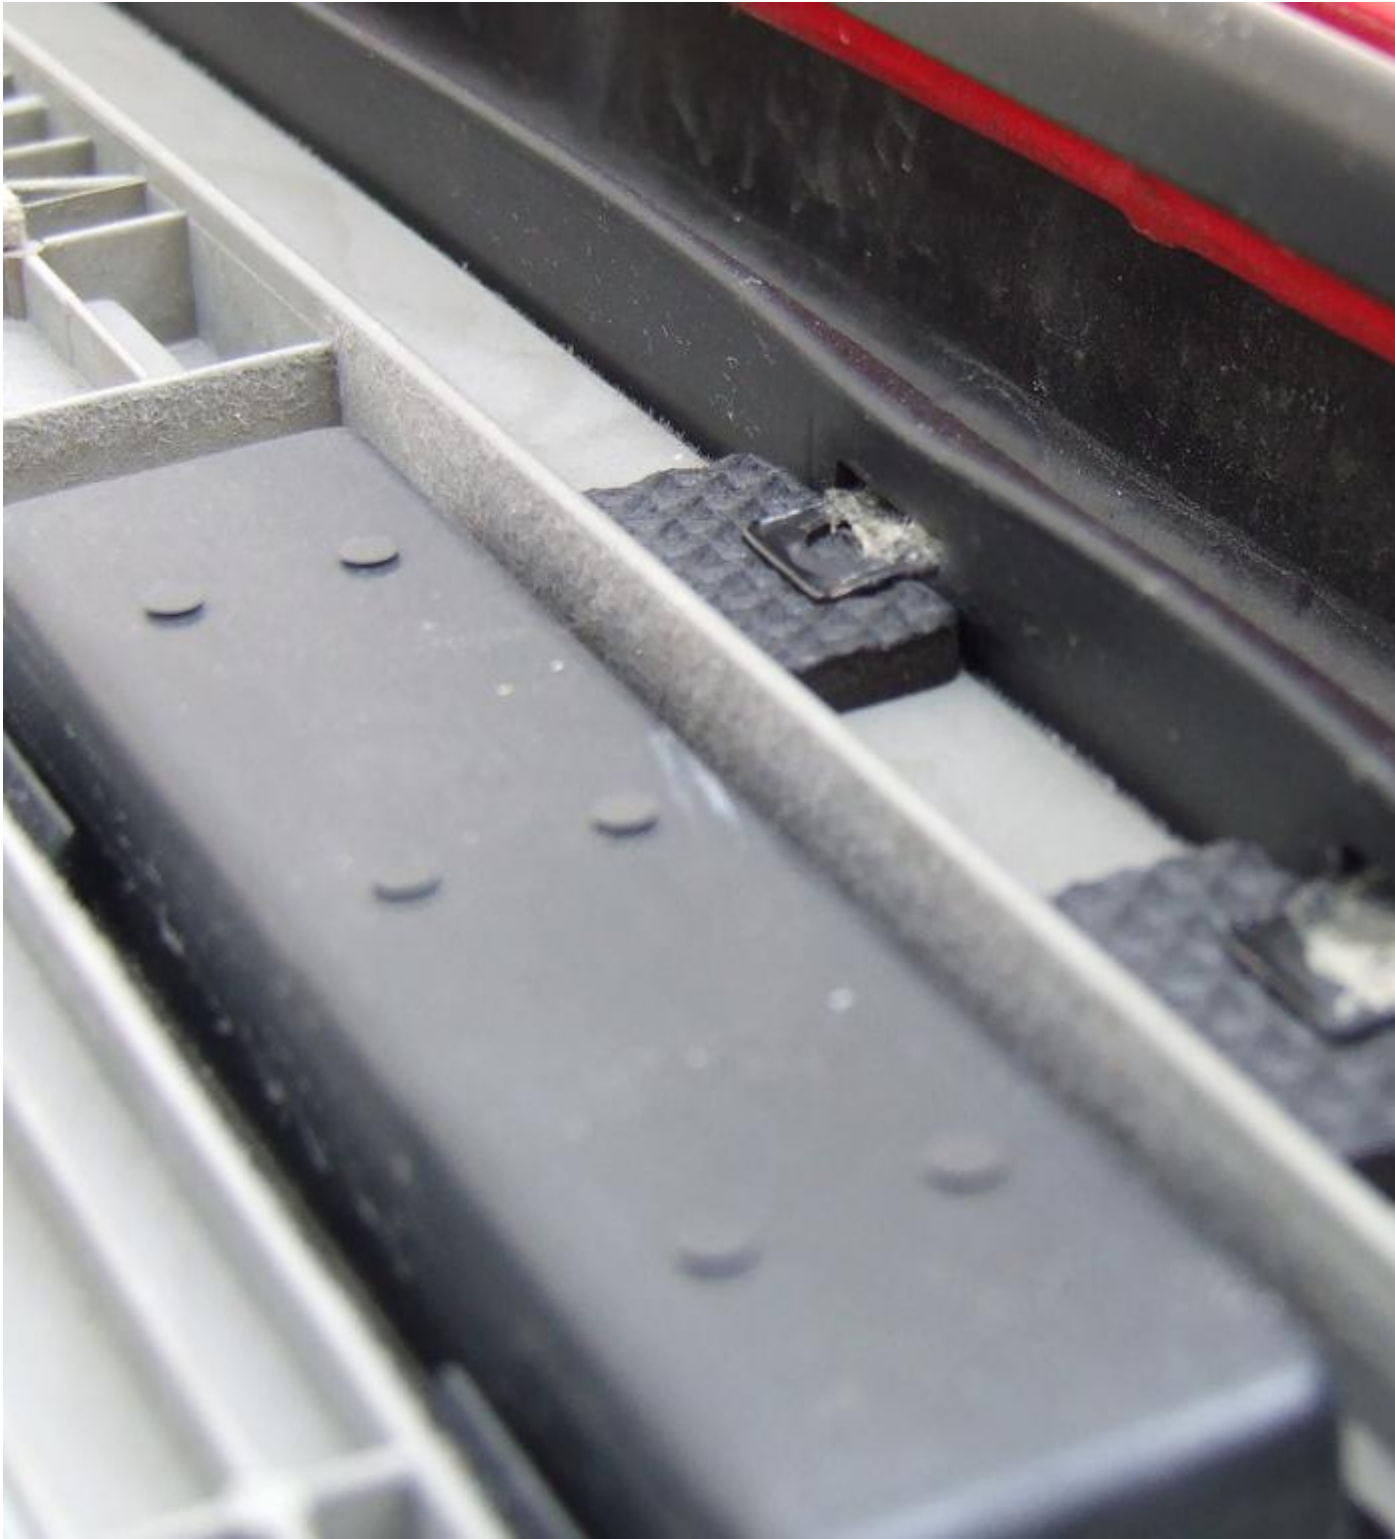

3) With the vent screen closed, place 2 pads, sticky side up, on the fibre strips, parallel with each other.



4) Slide the vent screen back so the pads slip under the metal strip. You may need to press downwards slightly on the vent screen so the pads clear the edge. When the pads are directly & neatly under the metal strip, push the vent screen up from inside to locate the pads in place.



Close the sunroof to the vent position as pictured



and you can easily reach under to firmly press the pads in place.

Job done, and the sunroof should now be rattle free.